

## **Specifications**


Supply voltage	230 – 240 V a.c.
Colour Temperature	5000 K
IP Rating	IP65
Net Weight	2 Kg
Ambient Temperature	-40°C to 40°C for the LED Head
	10°C to 40°C for the Remote gear

# 2 ways to install your Freezer Super LED Satellite


## Option1: Direct Ceiling Mount

#### Fix the remote gear to the ceiling


- 1) Drill a Ø20mm hole in the desired entry location for the power cable.
- 2) Install the gland into position.

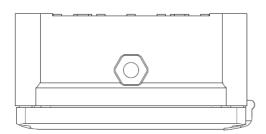


3) Fit the power cable through the gland and terminate into the terminal block. Use Ø10mm circular cable to maintain the IP rating.

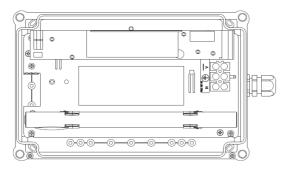

- 4) Drill another Ø20mm hole in the desired entry location for the connecting head cable.
- 5) Install the gland into position.
- 6) Fit the head cable through the gland and tighten.

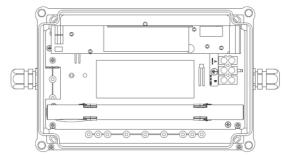


7) Fix the box to the ceiling through the 4 channels. Use 8 to 12 gauge screws. (not supplied)

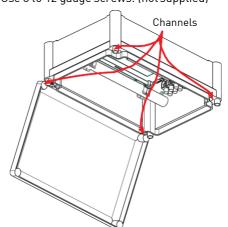




## Fix the LED head to the ceiling

- 1) Drill a Ø20mm hole on the side for the connecting head cable.
- 2) Install the gland into position.
- 3) Fit the head cable through the gland and tighten.
- 4) Fix the box to the ceiling through the 4 channels. Use 8 to 12 gauge screws. (not supplied)

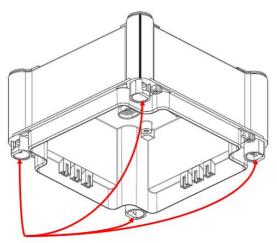

Channels

5)Close the LED head box cover and lock into position.

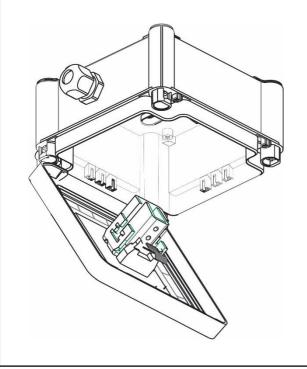

## Option 2: Fix to ceiling via lugs

1) Install the 4 lugs on LED head and remote gear if required.

