
Reset procedure for Code Lock 342610

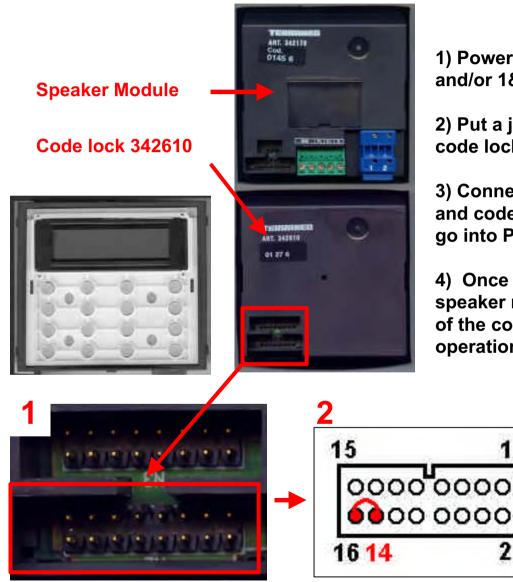

1) Power down 342170 speaker module - remove BUS and/or 1&2 power from speaker module.

2) Put a jumper across pin 14 & 16 of the 342610 numeric code lock as per Figure 1 & 2.

3) Connect the flat ribbon cable between speaker module and code lock module. Power up the speaker module and go into Programming mode to modify the password.

4) Once the password has been changed, power down the speaker module and remove the jumper across pin 14 & 16 of the code lock module. Power up again to go into normal operation.