



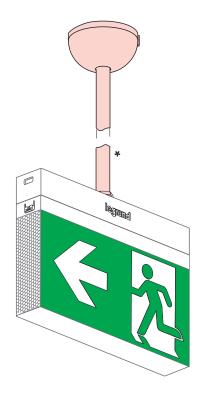

Suspension Rod kit

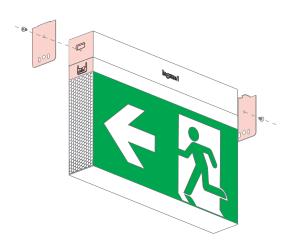

Anti-tamper kit (Cat.No: 659460)





■ On both sides, mark the pilot hole (Ø 2.5mm) into the housing using the brackets provided. Then fix the brackets with screws.

^{*}Refer to datasheet for the length of the suspension rod.




Wall L- bracket (Cat.No: 659459)

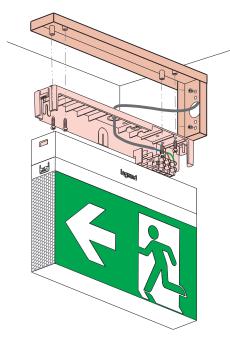

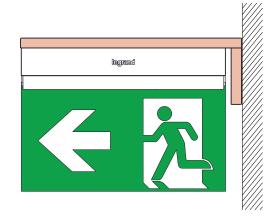


Wire suspension kit (Cat.No: 686216)

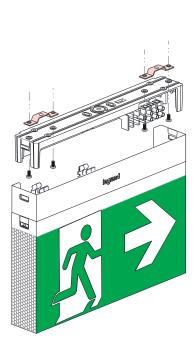






Fix the screws from inside (screws provided with the kit)



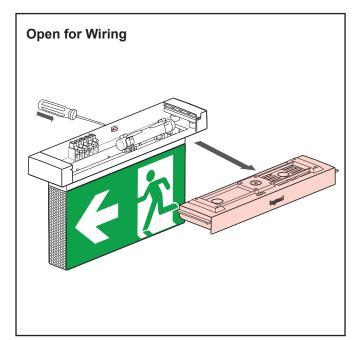


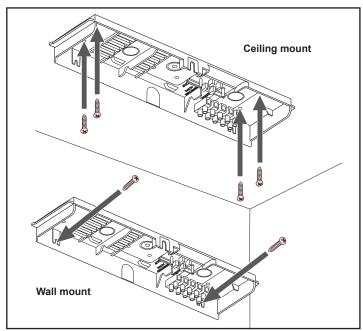


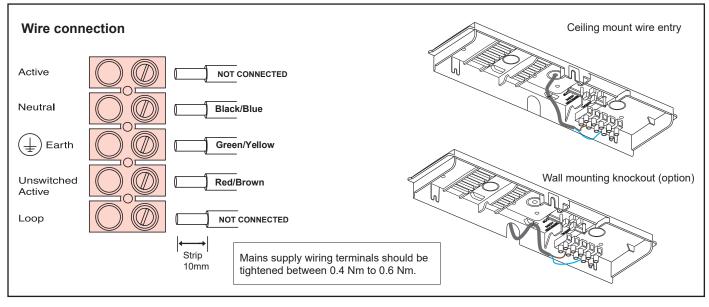


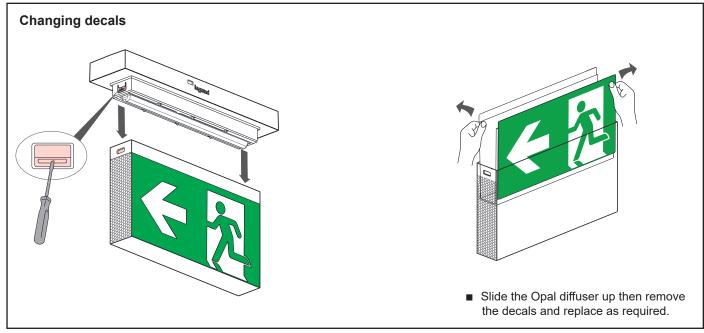



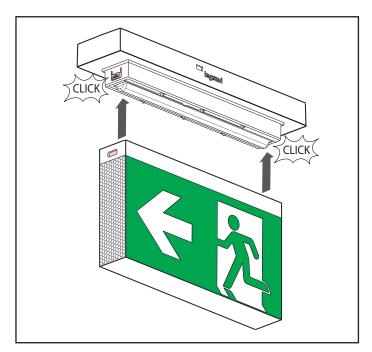


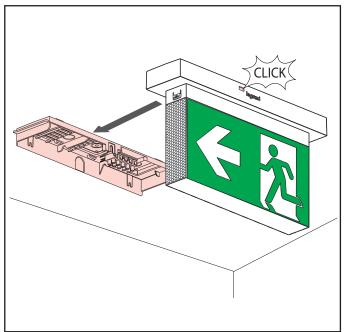

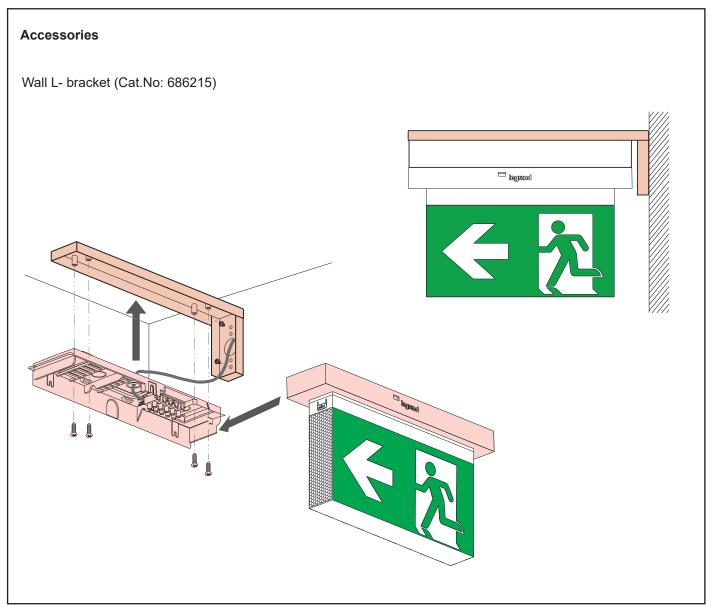




Anti-tamper kit (Cat.No: 659460)

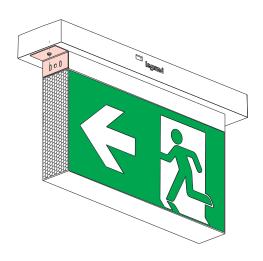


■ On both sides, mark the pilot hole (Ø 2.5mm) into the housing using the brackets provided. Then fix the brackets with screws.


Rod suspension kit

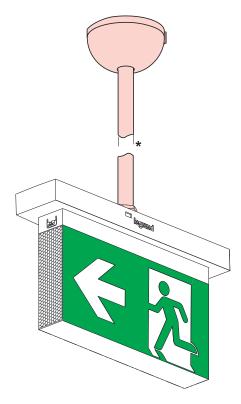

*Refer to datasheet for the length of the suspension rod.

Wire suspension kit (Cat.No: 686216)

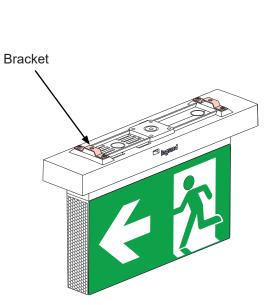

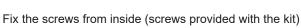



10 / 2020