



Suitable for 10A Light
and Ordinary Duty
3 Core Cable


Wiring instructions inside

Cat 100L



**3 pin
Plug**

WARNING: WIRE CORRECTLY

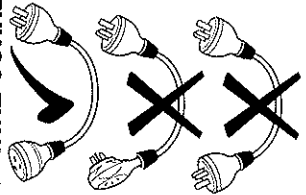

WIRING INSTRUCTIONS



- 1) Slide cord lock and plastic cover onto cord.
- 2) Strip as shown.
- 3) Twist strands and insert into clamp terminals. Secure tightly.
- 4) Loop all wires under lugs. Wires should be visible through bottom slots.
- 5) Push plastic cover down until lip is fully seated all around base (use screwdriver as lever).
- 6) Firmly tighten cord lock ring.

~~~~~ Brown or Red  
~~~~~ Blue or Black  
~~~~~ Green/Yellow

7mm

- Active - Brown (or Red) to A
- Neutral - Blue (or Black) to N
- Earth - Green/Yellow (or Green) to E

