


- Cat 106/5.**
- 1) Strip wires as shown.
  - 2) Twist strands of exposed wire.
  - 3) Push wires into slots as shown.
  - 4) Tighten terminal screws.
  - Earth - Green/Yellow (or Green).
  - Active - Brown (or Red) as shown.
  - Neutral - Blue (or Black) as shown.
- 5) Assemble and tighten cable clamp.
  - 6) Fit top cover and fasten by tightening two screws.

**WIRING INSTRUCTIONS**

**WARNING: WIRE CORRECTLY**

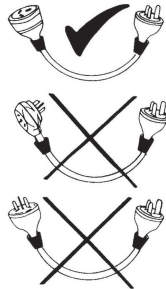

Cat 106/5

**25A Heavy Duty Slimline Plug**

Suitable for 25A ordinary duty  
4.0mm<sup>2</sup> 3-core flexible cord

25000D Made In China