


## Ceiling Exhaust Fan - Ducted Cat. No. EFD01RDWE, EFD01RDMS, EFD01SQWE, EFD01RDWEKIT

Instruction Manual



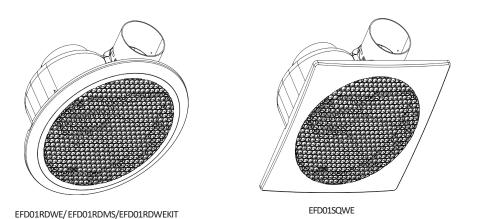

This product should be installed by a licensed electrical contractor or similarly qualified person.

Please read carefully: Read through these instructions completely before commencing installation. Retain for future use.

## 1 Specifications

Cat. No.	EFD01RDWE/EFD01RDWEKIT	EFD01RDMS	EFD01SQWE
Colour	White	Matt Silver	White
Supply Voltage	230-240 V a.c 50 Hz		
Power Rating	40 W max.		
Max. Airflow Rate (Non-ducted)	330 m³/hr		
Max. Airflow Rate (Ducted – Ø150 mm x 3 m)	250 m³/hr		
IP Rating	IPX4		
Duct Requirement	Ø150mm		
Ceiling cut-out size (Ceiling fan)	<b>Ø</b> 298mm		
External grille cut-out size	160 mm (EFD01RDWEKIT only)		
Projection into ceiling	190 mm		
Protrusion from ceiling	26 mm		
Grille size (Ceiling fan)		Ø372 mm	350 x 350 mm
Sound Pressure level at 3 m	36 dBA (Tested in accordance with AS1217.5)		

EFD01RDWEKIT includes : 1) External Grill

- 2) Ø150mm X 3m Duct
- 3) Cable ties
- 4) Duct tape
- 5) Mounting screws

Also available External wall kit accessory: R621/6D

# 2 Please read carefully


Read through these instructions completely before commencing installation. Retain for future use.

- 1. This product shall be installed in accordance to AS/NZS 3000 Wiring Rules.
- 2. Regulations concerning the discharge of air must be fulfilled. Local building codes may require venting to the outside.
- 3. This product must be installed at least 2.2m above floor level.
- 4. Do not install within 120cm of a stove or inside a shower recess.
- 5. Cross Ventilation:

Ventilation products must have an adequate source of external air to ensure rated performance. Steam and air will only be exhausted through the fan if there is sufficient flow of air through the room. Ensure adequate inlets exist through windows, vents or under the door. Airflow path from the inlet to the fan should ideally pass over the source of steam or air to be removed from the room. Restrictions on replacement air entering the room to be ventilated, or pressure-differentials between the room and outside air will significantly reduce the exhaust fan's performance.

- Compliance with Section 6 Damp Situation of AS/NZS 3000 Wiring Rules: No part of the unit may be located directly above any part of the bath or shower recess or enclosure. The unit must be installed within zones 2 and 3 only. For further information, refer to AS/NZS 3000.
- 7. Unit Orientation:

The unit must be installed to ensure the housing outlet and ducting is oriented in parallel to any roofing structures or supports. Refer to image below for correct installation orientation. Orientation which forces the unit to be ducted into a 90° bend immediately after the fan outlet will cause a significant performance reduction.

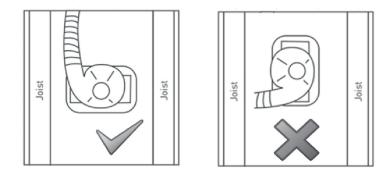


8. Duct Size and Length:


The unit must be installed with Ø150mm duct using the adaptor supplied to ensure optimum extraction and performance. The maximum recommended duct length is 3m. The graph below shows the unit's performance with 3m of duct. Longer ducts will reduce the unit's performance.

9. Duct Routing:

As the back pressure increases the unit's performance is reduced. Airflow will be reduced with bends in duct or squashing of duct. Every 90° bend/ elbow results in approx 20% reduction in the unit's performance. Please refer to the graph below, an almost linear relationship between back pressure and fan performance proves just how critical correct installation of the exhaust fan is in relation to performance.

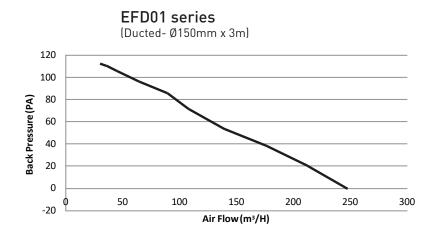



- 10. The unit can be installed as shown below in fig. A, fig. B and fig. C. When fitted, the duct outlet can be at the same height or lower/ higher than the exhaust fan.
- 11. Vertical ducting with roof vents will result in reduced fan performance, increased noise and condensation/dripping.

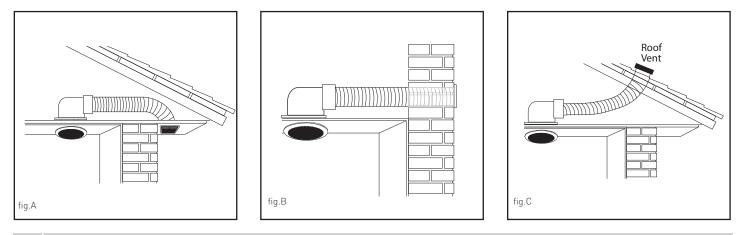



### 3 Installation (CEILING FAN)


- 1. Determine position in ceiling where the exhaust fan is required to be installed (figure 1).
- 2. Use the template provided to draw a circle. To do this, insert a thumb tack at one end and insert a pencil at the other end and scribe a circle (figure 2).
- 3. Cut out around this line (figure 3).
- 4. Remove grille from the exhaust fan.
- 5. Attach duct adaptor to duct with duct tape (figure 4).
- 6. Ensure that a power outlet is installed in the ceiling near the intended position of the exhaust fan. Ensure that power to the outlet is off. Plug the exhaust fan into this outlet (figure 5).
- 7. Attach duct adaptor to the exhaust fan outlet (figure 6).
- 8. Insert the unit into the cavity (figure 7).
- 9. With the unit in place, turn the toggles (4x) clockwise and tighten the screws until the clamps securely grip the ceiling (figure 8).
- 10. Push grille onto unit and click into position (figure 9).

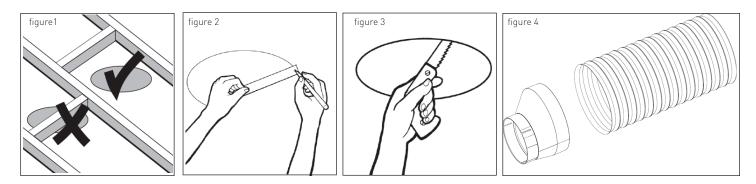

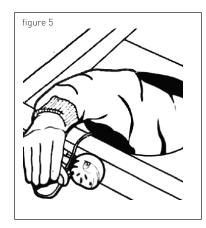

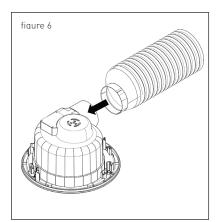

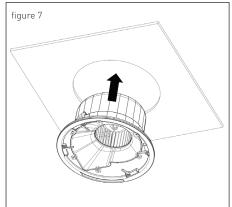

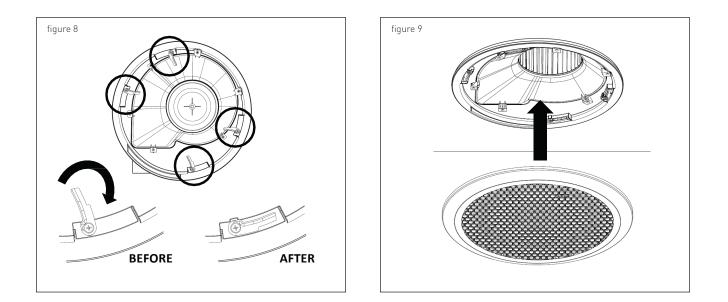

# 4 Installation for External Grille (EFD01RDWEKIT ONLY)


A suitable position must be found that will suit:

- 1. The position of the vent on the outside wall.
- 2. The location of studs, pipes, wires inside the cavity. Make a circular hole in the outside wall.


#### From the outside:

- 1. From the outside, pull the ducting through the outside hole.
- 2. Remove the inner louvred grille section by gently prying open with a screw driver.
- 3. Attach the vent frame to the duct with the cable tie firmly.
- 4. Push the vent frame back into the hole and attach with the appropriate screws for the wall material.
- 5. Snap in the louvred grille from the outside with the louvres pointing downwards.

**Note:** It is desirable to have the ducting as taut as possible as any slackness may restrict the air-flow through the ducting.

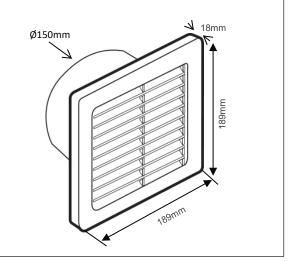

(R621/6D- Grille only)

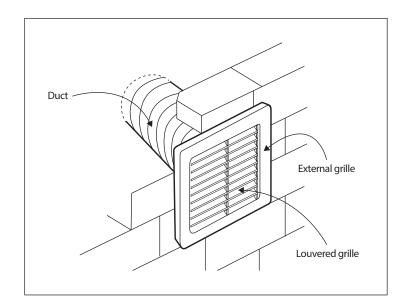

#### **Product Notes**

- 1. This product must be installed and used as per these instructions.
- 2. This product should be cleaned periodically only with a damp cloth. Cleaning agents and solvents should not be used.
- 3. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 4. This product is intended for household use and similar purposes. It is not suitable for use in an environment heavily laden with dust. Under these conditions the life of the fan motor can be significantly reduced.
- 5. This product should not be enclosed in thermal insulation as it may cause the unit to overheat.
- 6. This product has been designed to operate in ambient temperatures -10°C to 40°C.
- 7. This product contains no serviceable parts and no attempt should be made to repair it. If the product is faulty itshould be discarded.
- 8. Airflows listed in this product indicate the product performance. Refer to the BCA (Building Code of Australia), or similar, for the appropriate airflow required for a particular installation.
- 9. Ventilation productmust have an adequate source of external air to ensure correct performance.
- 10. Consideration must be taken in the installation of ducts to ensure that condensation that will form in the duct will not run back into the fan housing.
- 11. Exhaust fans may adversely affect the safe operation of appliances burning gas or other fuels (including those from other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of an exhaust fan such as a partition fan, the operation of flued gas appliance should be tested by a competent person to ensure that back flow of combustion gases does not occur.
- 12. This product has been designed for domestic or similar uses and is not suitable for a commercial installation.
- 13. This product is not suitable for installation in hazardous and/or corrosive areas.
- 14. Extended exposure to UV rays (such as exposure to direct sunlight) may cause discolouration of this product.
- 15. This product contains no serviceable parts and no attempt should be made to repair it. If the product is faulty it should be discarded.
- 16. The material in this product may vary in colour from batch to batch. Colour matching from one batch to another cannot be guaranteed.
- 17. This product utilises intellectual property in the form of registered designs, trademarks, and/or patents. Such intellectual propert remains the property of Legrand in all cases.
- 18. Legrand reserves the right to modify the specification of this product at anytime.

#### Warranty

Legrand warrants this product for a period of 3 years from the date of purchase. These goods come with guarantees that cannot be excluded under the Australian and New Zealand Consumer Laws. You are entitled to a replacement or a refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired if the goods fail to be acceptable quality and the failure does not amount to a major failure.

See the Warranty card enclosed with this product for further details.

#### **Customer Service**

For all Customer Service and Technical Support please call Monday to Friday during business hours.

Legrand Australia 1300 369 777 www.hpm.com.au

Legrand New Zealand 0800 476 009 www.hpm.co.nz

ABN: 31 000 102 661



9237AD

9/2023